


FLEXIBLE IMPELLER REMOVAL TOOL

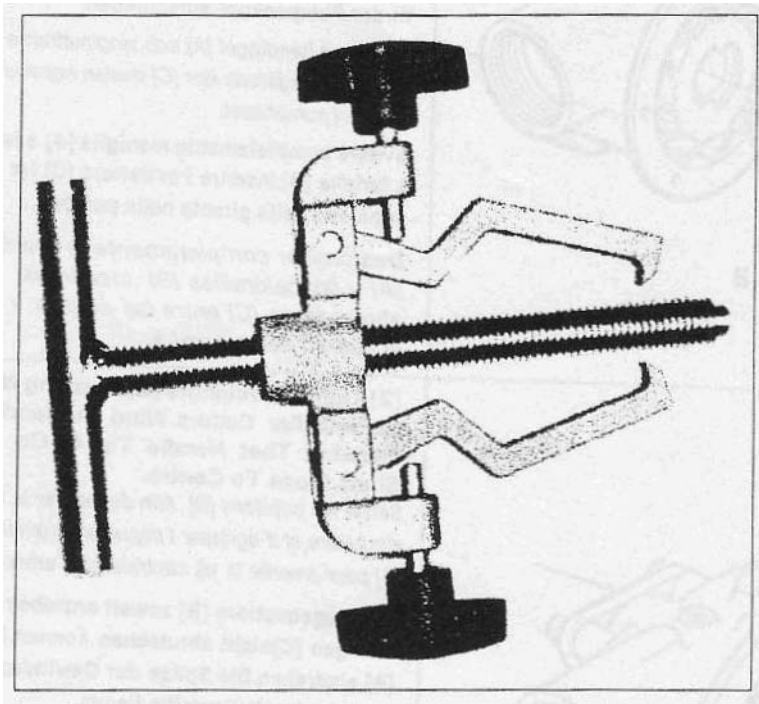


50070 - 00408

For 040 / 080 / 120 Impellers

50070 - 02008


For 200 Size Impellers and Above

- Made from tough, corrosion resistant stainless steel
- Large handle for maximum grip
- Suitable for Marine and Industrial Impellers

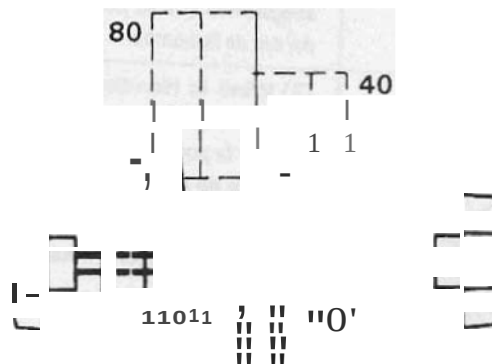

1


50070-00408

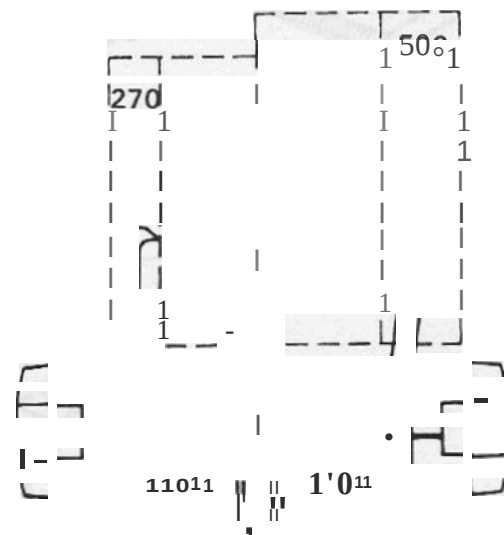

1

50070-02008

1

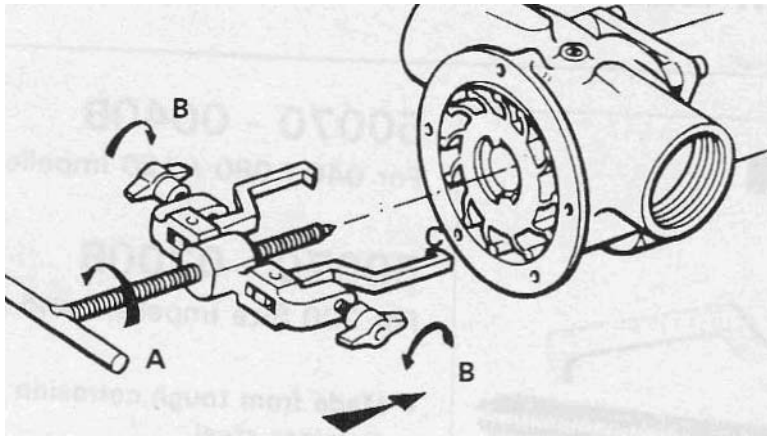

(11 Unwind **Handle** (A) and **Wingnuts** (B) Fully. Insert Clamp Prongs (e) Between Opposite Impeller Blades In The **Pump** Body.

Dévisser la poignée (A) et les les papillons (B). Insérer les griffes entre les pales.


Handgriff (A) und **Flügelmuttern** (B) vollständig zurückdrehen. Die beiden Zwingen (e) gegenüberliegend zwischen die Impellerflügel in der Pumpenkopf einschieben.

Skrúva ut handtaget (A) och vingmuttrarna (B) Sätt in avdragarens klar (e) mellan impellerbladen i pumphuset.

SVITA, s complet3menle **maniglia** (A) e le **vite** a **farfalla** (B). Inserire l'estrattore (C) fra le **palette** della girante nella pompa.

Destornillar camp/etimente la manija (A) y las palomillas (B). Insertar las abrazaderas (e) entre las paletas y el cuerpo de la bomba.

2

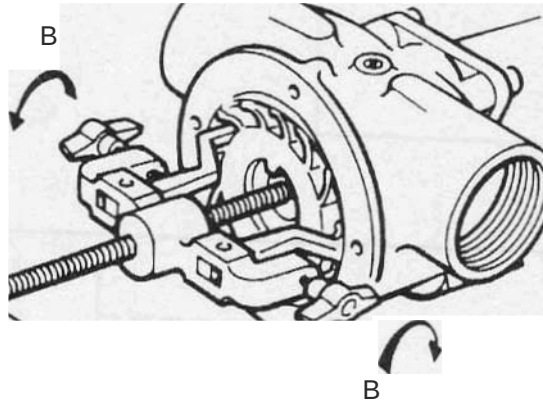

(21 Tighten Wingnuts (B) Ensuring No **Slip** On Impeller Occurs. Wind In Handle (A) Ensuring That Handle Tip Is On Pump Shaft, Close To Centre.

Serrer les papillons (B) Ann de centrer la vis centrale sur l'arbre, et d'agripper l'impulseur. Tourner la poignée (A) pour amener la vis centrale sur l'arbre.


Die Flügelmuttern (B) sowie **anziehen** dass die Zwingen (C) nicht **abrutschen** können. Handgriff (A) eindrehen. Die Spitze der **Gewindestange** muss in der Wellenmitte liegen.

Drag åt vingmuttrarna (B) så hårt att klorna inte glider på impellern. Drag åt handtaget (A) med spetsen i axelns centrum.

Avvitare le vite a farfalla (B) assicurando che non slittino. Avvitare la **maniglia** (A) appoggiando la punta al centro del albero della pompa.

Ajustar las palomillas (B) asegurándose que no resbalen en el impulsor. Atornillar la manija (A) asegurando que su punta apoye en el centro del eje de la bomba.

3

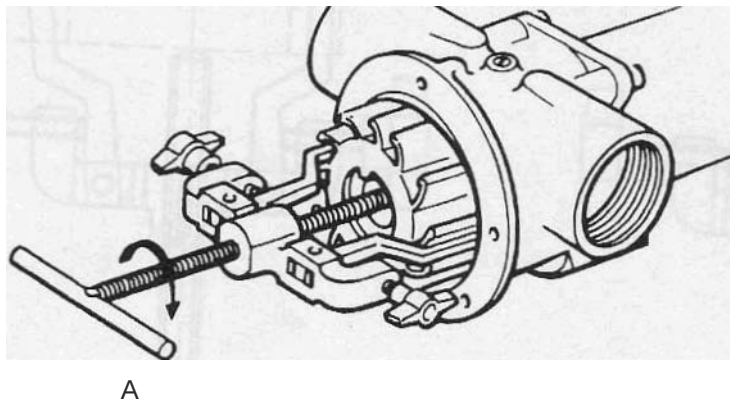

(3) Wind In **Handle** (A) Until Impeller Is Removed.

tourner la poignée (A) jusqu'à l'extraction complète de l'impulseur.

Handgriff (A) so lange eindrehen, bis der Impeller herausgenommen werden kann.

Skrúva in handtaget (A) lífs impellern lossnar.

Avvitare la **maniglia** fino ad estrane completamente la **girante**.

Atornillar la manija (A) hasta que el impulso sea extraído.



Jabsco

ITT Fluid Technology Corporation

Bingley Road, Hoddesdon,
Hertfordshire, EN11 0BU, England,
Tel: 01992 467191
Int. Tel: +44-1992-467191
Tlx: 263251 G Fax: 01992 467132

1485 Dale Way, Costa Mesa,
CA 92628-2158, U.S.A.
Tel. (714) 545-8251
Int. Tel. +1-714-545-8251
Fax. (714) 957 0609

For technical advice or service please take your pump into your local pump service center.
To order pump or parts or for pricing please go to the following links :

[Jabsco Pumps Home >>](#)

[Jabsco Pumps stock list >>](#)