



Model 59451-1012/24

ULTRA-MAX

FEATURES

Fully Assembled water pressure set with pump, pressure switch, accumulator tank and pump-guard strainer.

- Ideal for up to four outlets
- All units mounted on one board for rapid and easy installation by boatbuilder and boat owner alike
- Self-priming to 10 ft. (3m)
- Runs dry without damage
- Smooth even flow
- Simple and low cost installation
- Thermal overload protection
- Pressure switch cut-in 20 psi (1.4 bar) cut-out 40 psi (2.8 bar)
- Meets USCG Regulation 183.410 and EN ISO8846 Marine (Ignition Protection)
- Port adapter for 1/2" (13 mm) I.D. hose barb and 1/2"-14 pipe thread fittings
- Flow of 3.8 GPM (14.4 LPM)
- Accumulator tank is pre-pressurized to 20 psi
- Shipping weight 6.6 lb. (3 kg)
- **CE** marked

INSTALLATION INSTRUCTIONS

The Ultra-Max should be bolted securely to a flat surface in any suitable location within the vessel where it remains accessible for routine maintenance, taking care not to over compress the mounting feet. The unit should be installed within the system after the water tank and before the pipeline divides to serve the water heater or other outlets. Connect the supply from the water tank to the inlet port on the pumpguard. Connect the outlet plumbing to the discharge port on the Accumulator Tank.

⚠ WARNING



Explosion hazard. Do not pump gasoline, solvents, thinners or other flammable liquids. To do so can cause an explosion resulting in injury or death.



Model 59451-1012/24

OPERATION INSTRUCTIONS

Check level of water in tank.

Open all faucets hot and cold.

Switch pump on and wait for hot water tank and water lines to fill.

Close each faucet as flow becomes steady and free of air (Close cold water faucet first). Pump should shut off soon after closing last faucet.

Pump is now ready for automatic operation. It will start when faucet is opened and stop when faucet is closed.

If pump will be inoperative for a considerable time, turn off circuit to pump and bleed system by opening a faucet.

It is advisable to run the pump for 2 minutes on first installation to flush fresh water through the pump.

⚠ CAUTION

Motor case will get hot. Prolonged contact during operation may cause a burn.

⚠ CAUTION

Do not overpressurize tank, maximum working pressure is 125 psi (8.6 bar).

ELECTRICAL CONNECTIONS

Using the table below select the correct cable size. Cable run is the total length of the cable from the positive battery terminal to the pump and back to the negative terminal.

Model No.	Voltage	Amp Draw	Maximum Fuse Size	Cable Length	Minimum Wire Size
59451-1012	12V	8 Amp	12 Amp	10-15 ft. (3-5 m)	12 AWG (2.5 mm ²)
59451-1024	24V	4 Amp	6 Amp	10-15 ft. (3-5 m)	14 AWG (1.5 mm ²)

The electrical circuit should be protected with an over current protection device in the positive lead. The red terminal on the board is positive, the black terminal is negative.

For technical advice or service please take your pump into your local pump service center.
To order pump or parts or for pricing please go to the following links :

[Jabsco Pumps Home >>](#)

[Jabsco Pumps stock list >>](#)