




Models 12850-SERIES 12860-SERIES

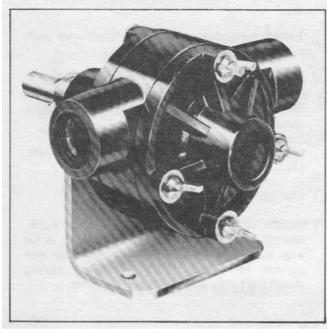

SELF-PRIMING PUMPS

DESIGN FEATURES

Body: Phenolic Plastic

Impeller: Neoprene or Nitrile

Shaft: 316 Stainless Steel

Shaft Seal: Carbon-Ceramic Face Type, Nitrile

Bearmgs: Carbon

Ports: Model 12850-Series- 1/2" NPT

Model 12860-Series – 1" NPT

Welght: Model 128S0-Series- 334 lbs (1,7 kg) Model 12860-Series- 51/2 lbs (2,5 kg)

Model Description

12850-0001 Neoprene Impeller
12850-0003 Nitrile Impeller
12860-0001 NeopreneImpeller
12860-0003 Nitrile Impeller

NOTE: Carbon/Carpenter 20 seal available as a spare parl.

APPLICATIONS

Designed as a low cost pump for: transfers, circulation, spill returns, filtration and filling line use. Easily handles pure solutions, foaming liquids, emulsions, suspended solids, gels and ferments. Because the plastic pump is resistant to corrosion and metallic contamination, it is widely used for pumping photo chemicals, plating compounds, lab solutions, pharmaceuticals, cosmetics, weak acids, alkalies, liquid fertilizers, insecticides, dyes, detergents, waxes and many more.

See the Jabsco Chemical Resistance Table (available upon request from In Jabsco). It has been prepared to help you select the most suitable impeller and pump material.

OPERATING INSTRUCTIONS

- 1. INSTALLATION Pump may be mounted in any position. The rotation of the pump shaft determines the location of lhe pump's intake and discharge ports. Refer 10 dimensional drawing. Before starting, turn the pump shaft in the direction of the operating rotation.
- 2. DRIVE Belt or Direct With flexible coupling.

NOTICE Do not press a pulley or coupling on the shaft Without supporting the shaft 10 prevent its movement into the impeller bore.

BELT DRIVE - Overtight belt load Will reduce pump bearing

DIRECT DRIVE - Clearance should be left between drive shaft and pump shaft when installing coupling. Always mount pump and align drive shaft before tightening the coupling set screw.

- SPEeDS 100 RPM to the maximum shown in the performance lable. For longer pump life, operate at lowest possible speeds.
- 4, SELF-PRIMING- Primes at low orhigh speeds. Forvertical dry suction lift of 10 feet, a mmimum of 800 RPM is required. Pump will produce suction lifts up to 22 feet when welted. BE SURE SUCTION LINES ARE AIRT!GHT OR PUMP WILL NOT SELF-PRIME.
- RUNNING DRY Unit depends on liquid pumped for lubrication. DO NOT RUN DRY FOR MORE THAN 30 SECONDS. Lack of liquid will damage the impeller and other components.
- 6. CAUTION Do not pump petroleum derivatives, solvents, thinners, highly concentrated or organic acids. If corrosive fluids are handled, pump life will be prolonged ifflushed with water after each use or after each work day. Consult Jabsco Chemical Resistance Table in Industrial Catalog. For further information contact factory.
- PRESSURES Forcontinuousoperation, pressure should nOI exceed 20 PSI for 12850-Series and 30 PSI for 12860-Series.
- TEMPERATURES Recommended temperature range with neoprene impeller 45° to 180' F (Tt082 Cj, and with nitrile impeller 50° to 180°F (10° to 82°C).
- 9. SPARE PARTS A Jabsco Service Kit should be kept on hand to maintain all but the most badly worn pumps.

SERVICE INSTRUCTIONS

• Disassembly Steps

0 Assembly Steps

To Replace Impeller:

Remove wing nuts, washers, and end cover.

Remove pump head from seal housing. Remove O_rings from body grooves.

- 3 Push impeller from body bore.
- 4 0 Grasp hub of impeller and with a rotary motion push it into the lubricated body bore. Replace O-rings in body grooves. (Before putting body-impeller assembly on shaft, push impeller up so blades bend under cam located in top of body.)
- 5 0 Install body-impeller assembly on shah, lining up double flat drives of impeller. Install top thru-boh and washer.
- 6 0 Install bottom three bolts through mounting bracket and body; install end cover, securing with washers and wing nuts.

- 11 0 Lubricate seal spring with silicone grease and install spring and **O-ring** onto carbon face seal.
- 12 0 Install carbon face seal into seal bore with seal face outwards.
- 13 0 Install shaft sub-assembly into bearing housing, push ceramic seal seat down onto shaft until it rides on carbon face, and seal seat gasket faces out.
- 14 0 Install collar with two set screws onto shaft. Do not tighten.
- 15 0 Complete steps 4,5, and 60.
- 16 0 Adjust seal force by sliding set screw collar against seal and lining up slots with drive lugs while shaft is pulled all the way out against its thrust collar. Compress spring about half way and tighten set screws.


To Replace Seal Assembly 7 • Follow steps

- Loosen set screws and remove seal collar assembly.
- Pull shaft from impeller end of bearing housing, which will remove seal gasket and seal seat from shaft.
- 10 Remove seal face piece, O-ring and seal spring from rear of bearing housing.

To Replace Bearings:

- 17 Follow steps 7 ,8 . and 9 .
- 18 Remove bearing sleeve from bearing housing.
- 19 Remove bearing sleeve and thrust plate from end cover piece.
- 20 () Install thrust plate and bearing sleeve in end cover.
- 21 () Install bearing sleeve into bearing housing.
- 22 0 Follow assembly steps 11 O. 12 O. 13 O. 14 0 . 15 0 . and 16 0 .

EXPLODED VIEW

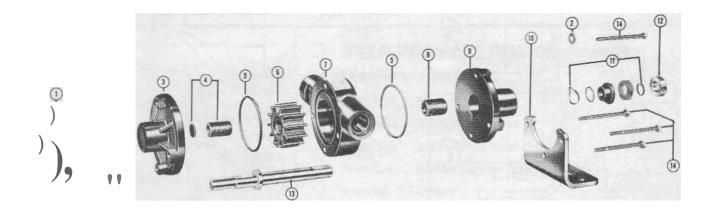

PARTS LIST


MODEL	12850	-0001	AND	VARIATIONS
MODLL	12000			

MODEL 1286O-0001 AND VARIATIONS

Key	De scription	Part Number	Diy - Req .	Key	Description	Part Number	Diy_ Req.
1	Wing Nut 1/4·20	91107-0030	4	1	Wing NUI 14-20	91107-0030	4
2	Flat Washer	91601-0040	5	2	Flat Washer	91601 -0040	5
3	End Cover	12854-0000	1	3	End Cover	128540000	I
4	Thrust Plate and Bearing	12875-0000	1	4	Thrust Plate and Bearing	12875-0000	1
5	'O-Ring (Bodyl	92000-0310	2	5	*O-Ring (End Cover)	92000-0310	2
6	*Impeller (Neoprene) (Nitrile)	14281-0001 14281-0003	1	6	*Impeller (Neoprene) (Nitrile)	14282-0001 14282-0003	1
7	Body	4974-0010	1	7	Body	5170-0010	1
8	Carbon Bearing (Housing)	12R63-0000	1	8	Carbon Bearing (Horsing)	12863-0000	1
9	Bearing Housing	12853-0000	1	9	Bearing Housing	12853-0000	1
10	Bracket (Mounting)	12855-0000	1	10	Bracket (Mounting)	12855-0000	1
II	Seal Assembly Carbon/Ceramic Carbon/Carpenter	12865-0000 12865-0600	1 Available as Optional Part	П	*Seal Assembly Carbon/Ceramic Carbon/Carpenter	12865-0000 12865-0600	1 Availabless Optional Part
12	Seal Collar	12938-0000	1	12	Seal Collar	12938-0000	
13	Shaft Assembly Stainless Steel	12857-0010	1	13	Shaft Assembly Stainless Steel	12867-0010	1
14	Boft 114-20x3-1/4	91094-0170	4	14	Bolt 1f4-20x4	91094 -0050	4
	Service Kit With Neoprene Impeller With Nitrile Impeller	90 130-000 1 90130-0003			Service Kit With Neoprene Impeller With Nitrile Impeller	90132-0001 90132-0003	

PARTS CONTAINED IN SERVICE KIT.

www.PumpAgents.com

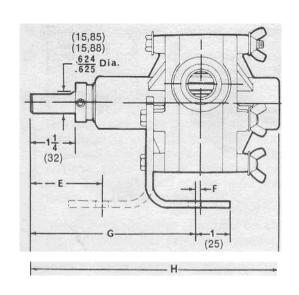

6,,

12,2

1a,3

6,3

4,7

23,8

17,8

8,7

17.3

26.0

0,6


, ,2

1,8

20

40

60

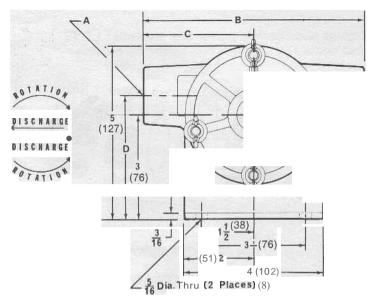

	A	В	С	0	E	F	G	Н
12850-0001	1/2" NPT1nt. (2 Places)	6-3/8 (162)	3-3/16 (81)	3-9/16" (90)	2-5/32" (55)	1/8 (3)	4-27/32" (123)	7-7/32" (183)
12860-0001	1" NPT Int. (2 Places)	6' (152)	3 ' (76)	3-5/8" (92)	2-3/16" (56)	1/2" (13)	4-7/8 (124)	7-3 1132 (202)

CAPACITY CHART

MODEL 12850-0001

	TOTAL HEAD			500 RPM			1160 RPM			1750 RPM		
PSI	kg/cm ²	ft. of water	meters of water	GPM	∤ /miii	hp	GPM	r Imlll	hp	GPM	[Imin	h,>
4,3	0,3	'0	3,0	3,0	11,4	1/6	7,6	28,8	1/4	11.0	41,6	, /2
8,7	0,6	20	6, ,	1.8	6,8	1/6	6.4	24,2	1/4	10.0	37,9	1/2
13.0	0,9	30	9,1	-	-	-	4,8	18,2	1/3	8,5	32,2	1/2
21.6	, ,5	50	15,2	-	-	-	-	-	-	5,0	18,9	'/2
MODEL 12860-0001												
	TOTAL HEAD		500 RPM			1160 RPM			1750 RPM			
PSI	kg/cm^2	ft. of water	meters of water	GPM	I /min	hp	GPM	(/min	hp	GPM	(inlin	hp
4,3	0,3	10	3,0	6,8	25,7	1/6	16.5	62,5	'/3	26.0	98,4	3/4

1/4

1/4

ITTJABSCO

92,7

79,5

62,5

3/4

3/4

1

15.9

13.5

9,5

60,2

51,1

36,0

'/3

' /3

, /2

24.5

21.0

16.5