


# JABSCO® PUMPS

How to Install Vacuum Switch  
Kit No. 17465-0000 on  
Jabsco AC Macerator No. 17460-0003

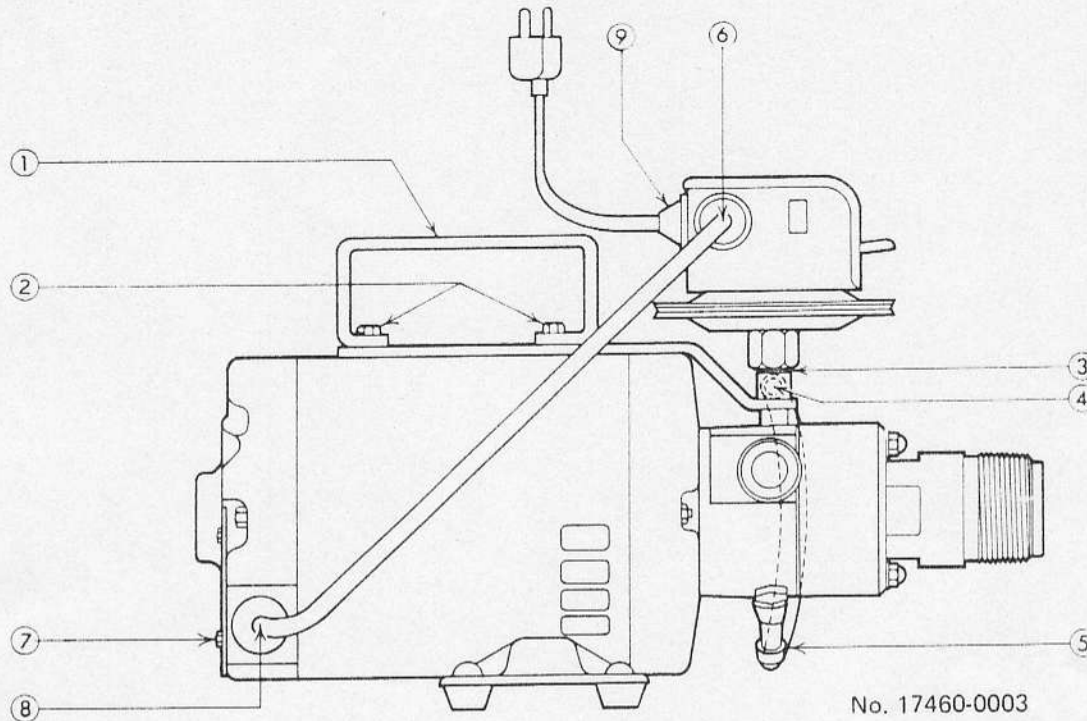

No. 17460-0003

JABSCO AC Macerator No. 17460-0003  
Kit No. 17465-0000 on

## INSTALLATION:

- ① Remove handle from top of motor and place bracket for mounting switch on top of the motor.
- ② Secure bracket and handle with two hex-head screws provided.
- ③ Install switch on elbow located at the end of mounting bracket.
- ④ Connect plastic hose to base of switch.
- ⑤ Install plastic elbow in under side of pump body and slip plastic hose over end of elbow.
- ⑥ Remove switch cover from switch, connect pigtail wire to motor side.
- ⑦ Remove end cover from rear of motor and disconnect AC cord.
- ⑧ Connect pigtail to rear of motor and replace cover.
- ⑨ Connect AC cord to the line side of switch, replace switch cover.

## OPERATION:

To operate: Connect pump and switch to AC 110 volt power.

Make sure adequate voltage and current capacity is available.

Press lever on vacuum switch down for a few seconds to start the pump. (The lever will stay down as long as the unit is pumping. When the tank is completely pumped out it will shut off automatically.)

NOTE: If lever will not stay down on start-up, check to be sure suction nozzle is airtight and that there is liquid in the tank.

DO NOT HOLD LEVER DOWN FOR MORE THAN 15 SECONDS. DOING SO WILL RUN PUMP DRY, CAUSING DAMAGE TO THE IMPELLER.

# JABSCO PRODUCTS ITT

Marine and Recreation Components Division  
International Telephone and Telegraph Corporation

1485 Dale Way, Costa Mesa, California 92626 Phone 714/545-8251

---

For technical advice or service please take your pump into your local pump service center.  
To order pump or parts or for pricing please go to the following links :

[Jabsco Pumps Home >>](#)

[Jabsco Pumps stock list >>](#)